


LE KLINT

CARRONADE - LK 160S/M

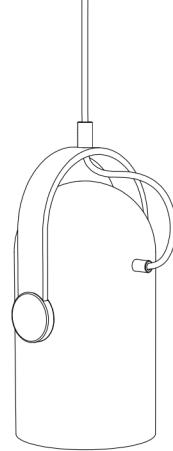

INDHOLD

- Metalskærm monteret med et træ ophæng
- Diffuser til montage i lampen
- Instruktion omhandlende udpakning, montage og vedligeholdelse

UDPAKNING OG MONTAGE

Lampen er færdig monteret og klar til ophængning. Såfremt man ønsker det kan den medfølgende diffuser benyttes, se billeder for isætning nedenfor.


Brug evt. den medfølgende krog, hvis den egner sig til den type loft, som lampen skal ophænges i.

Vippefunktion:

Lampen har en vippefunktion, der gør det muligt at vippe skærmen i den ønskede position for at pege lyset i en bestemt retning.

Såfremt vippefunktionen skal efterspændes, bruges medfølgende umbraco nøgle.

Det er vigtigt at lampen er slukket og pæren skal være afmonteret. Nu kan begge sideskruer efterspændes (se tegningen nedenfor).

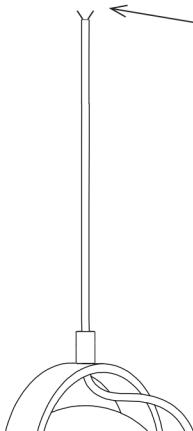

	L	N
DA/SV/NO	Brun	Blå
FI	Ruskea	Sininen
EN	Brown	Blue
DE	Braün	Blau
IT	Marrone	Blu
FR	Brun	Bleu
ES	Marrón	Azul

VEDLIGEHOLD

Skærmen holdes ren ved aftørring med hårdt opvredet blød klud eller støvbørste.

Vær opmærksom på at lakken udvendigt på lampen kan tage skade ved brug af rengøringsmidler og sprit.

LYS

Anbefalet max. wattage:

Model 160S: LED-/Sparepære max. 10 W

Model 160M: LED-/Sparepære max. 15 W

Der skal benyttes LED eller energisparepære i lampen, da skærmen ellers kan blive for varm og ødelægge ledning/fatning. Ved for højt wattforbrug kan det give varmeproblemer i lampen.

CONTENTS

- Metal shade mounted with a wooden hang-up
- Diffuser for mounting
- Instructions for unpacking, fitting, and maintenance.

UNPACKING AND ASSEMBLY

The lamp is fully assembled and ready for hanging. If needed the included diffuser can be used. See the pictures below for mounting instruction.

If possible use the supplied hook if it is suitable for the type of ceiling the lamp should hang from.

Tilt function:

The lamp has a tilt mechanism which makes it possible to tilt the shade to the desired position in order to direct the light in a particular direction.

If the tilt function must be tightened, use the supplied Allen key. It is important that the lamp is switched off and the bulb must be removed. Now both side screws can be tightened (see drawing).



MAINTENANCE

Keep the shade clean by wiping with a slightly damp soft cloth or using a dust brush.

Be aware that the paint on the outside of the lamp can be damaged by the use of detergents and alcohol.

LIGHT

Recommended max. wattage:

Model 160S: LED-/CFL bulb max. 10 W

Model 160M: LED-/CFL bulb max. 15 W

LED or energy-saving bulb must be used in the lamp, as the shade may otherwise become too hot and destroy the wire / socket. If the wattage is too high, it can cause heat problems in the lamp.